Type 1872

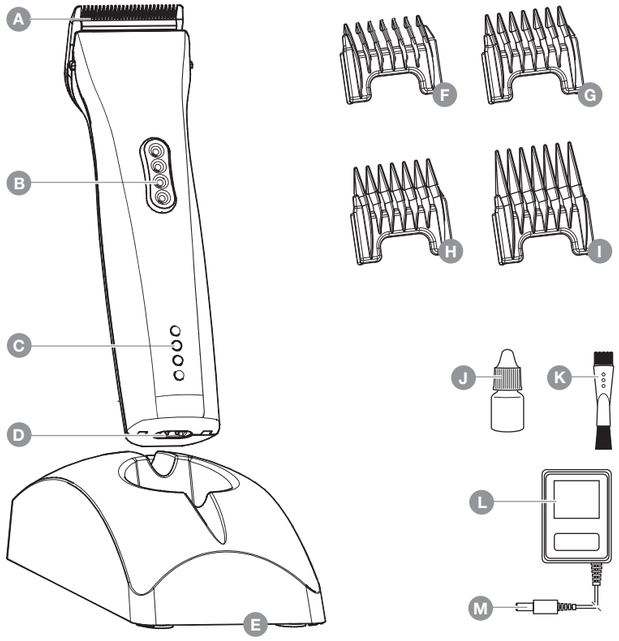

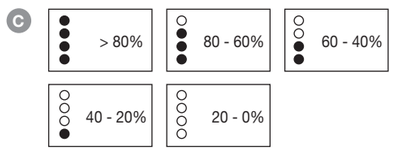

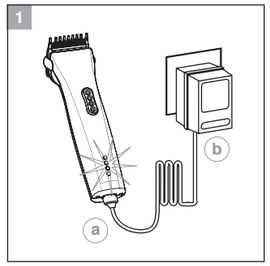

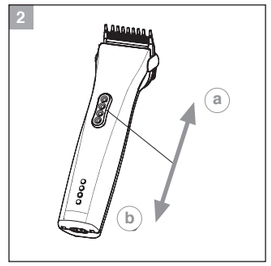

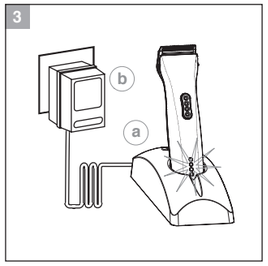

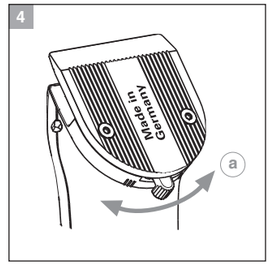

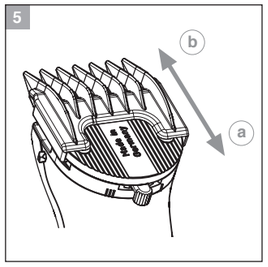

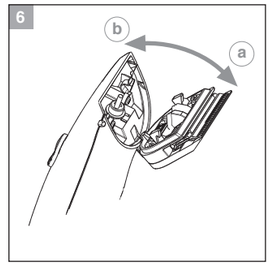

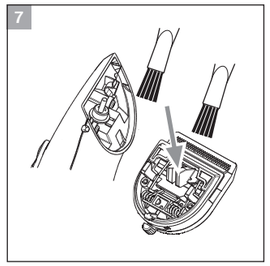

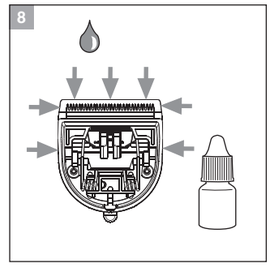

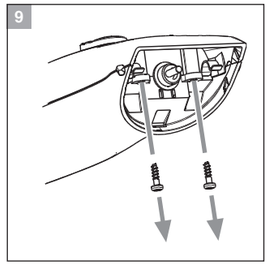

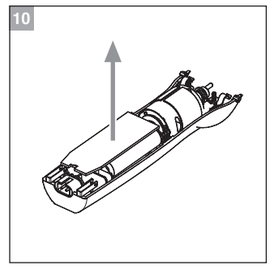

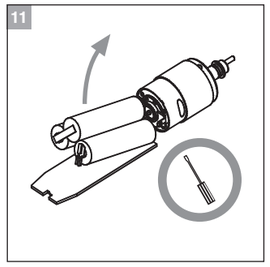

en **Operating Instructions**
Cord/Cordless Hair Clipper

1872-1290 · 09/2013

en **ENGLISH**

Description of parts
A Blade set
B On/Off switch
C Charge indicator
D Appliance socket
E Charging stand
F Attachment comb, 3 mm cutting length
G Attachment comb, 6 mm cutting length
H Attachment comb, 9 mm cutting length
I Attachment comb, 12 mm cutting length
J Oil for the blade set
K Cleaning brush
L Plug-in transformer
M Appliance plug

Important safety information
For your own protection from injuries and electric shocks, the following information must be observed when using electrical equipment:

Read all the instructions before using the appliance!
- Only use hair clippers to cut human hair.
  Only use animal clippers to cut animal hair and animal fur.
- Only connect the equipment to an AC mains supply. Note the rated voltage on the rating plate!
- Never touch electrical equipment that has fallen into water. Disconnect from the mains immediately.
- Never use electrical equipment in the bath or shower.
- Always position or store electrical equipment where it cannot fall into water (e.g. wash basin). Avoid electrical equipment being exposed to water and other liquids.
- Always disconnect the appliance from the power supply immediately after use except when charging.
- Disconnect the appliance from the power supply before cleaning.
- This appliance is not suitable for use by people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance unless under the supervision of or after having received instruction in the use of the apliance by an individual who is responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- Only use the appliance for the proper purpose as described in the operating instructions. Only use accessories recommended by the manufacturer.
- Never use the appliance if the mains cable or plug-in transformer is damaged. In addition, do not use the appliance if it is not working correctly, if it is damaged or if it has fallen into water. In these cases, send the appliance to our Service Centre to be inspected and repaired. Only specialists properly trained in the handling of electrotechnical devices may repair electrical equipment.
- Do not hold the appliance by the mains cable to carry it and do not use the cable as a handle.
- Keep the appliance away from hot surfaces.
- Make sure that the mains cable is not twisted or kinked during charging or storing.
- Never insert or allow objects to fall into the openings of the appliance.
- Never use the charging stand outdoors.
- Never use the appliance where aerosol (spray) products are being used or where oxygen is released.
- To protect against injuries, never use the appliance if the blade set is damaged.
- Do not use disposable batteries. Rechargeable battery units can only be obtained from authorized Service Centres.
- **Before the equipment is used for the first time, it should be charged for 10 hours.**
- The appliance is safety insulated and radio screened. It meets the requirements of EU Directive 2004/108/EC regarding electromagnetic compatibility and EC Low Voltage Directive 2006/95/EC.

Exhausted batteries/rechargeable batteries should not be disposed of in household waste. Dispose of them in completely discharged state in accordance with legal regulations.

Mains operation
- Connect the plug-in transformer to the appliance socket (Fig. 1ⓐ).
- Connect the plug-in transformer to the power supply (Fig. 1ⓑ).
- Switch the appliance on using the on/off switch (Fig. 2ⓐ) and, after use, switch it off again (Fig. 2ⓑ).
- Note: If the appliance does not function in power supply operation when the battery is fully discharged, switch it off and charge the battery for 5 minutes until the lowest segment of the LED charge indicator starts to flash. Switch the appliance on again and operate from the power supply.

Charging the rechargeable battery
- Connect the plug-in transformer to the charging stand socket (Fig. 3ⓐ).
- The appliance can also be connected directly to the plug-in transformer for charging (Fig. 1ⓐ/ⓑ).
- Connect the plug-in transformer to the power supply (Fig. 3ⓑ).
- Switch the appliance off with the On/Off switch (Fig. 2ⓑ).
- Place the appliance in the charging stand. A segment of the charge indicator flashes during charging depending on the level of charging. When the rechargeable battery is fully charged, all the segments of the charge indicator are permanently illuminated. When the appliance is removed from the charge stand, all the LEDs go out after about 30 seconds (power-save mode).
- Recommendation: only recharge the battery when its performance has deteriorated noticeably or none of the segments of the charge indicator is illuminated.
- When none of the segments of the charge indicator is illuminated, the appliance still has a residual capacity of about 20%.
- It should take around 2.5 hours for the battery to charge to full capacity.

Cordless operation
- Using the ON/OFF switch, switch on the appliance (Fig. 2ⓐ), then switch off again after use (Fig. 2ⓑ).
- After the appliance is switched off, the display remains active for about 30 seconds (power-save mode).
- The appliance can also be used without the power supply for a maximum of 100 minutes if the battery is fully charged.
- **Note:** In case of insufficient maintenance of the blade set, the operating time can be reduced considerably.

Cutting length adjustment
The cutting length adjustment integrated in the blade set (Fig. 4) has five settings to determine the length of the hair from 0.7 mm to 3 mm Move the adjusting lever to the required position and click it into place.

Attaching / removing the attachment comb
- Slide the attachment comb all the way on to the blade-set in the direction indicated by the arrow. (Fig. 5ⓐ).
- The attachment comb can easily be removed by pushing it in the direction of the arrow (Fig. 5ⓑ).

Cutting with attachment combs
The appliance can also be operated with attachment combs. To achieve the desired cutting length, the cutting length adjustment lever has to be set to position 1 (Fig. 4ⓐ). The following attachment combs are supplied with the appliance: 3 mm, 6 mm, 9 mm and 12 mm cutting length. Attachment combs (18 mm and 25 mm) are optionally available.

Cleaning and general care
- Never immerse the appliance in water.
- Remove the attachment comb after each use and remove residual hairs from the housing opening and blade set using the cleaning brush. First remove the blade set (Fig. 6ⓐ) and press the cleaning lever (Fig. 7). This makes it easy to remove residual hairs from between the top blade and bottom blade with the cleaning brush (**EASY CLEANING**).
- The charging contacts on the appliance and charging stand must always be kept clean.
- Only wipe the appliance with a soft or slightly damp cloth.
  Never use solvents or scouring agents.
- The blade set may be cleaned with a hygienic spray order no. 4005-7051.
  Do not use any other cleaning agent.
- The blade set should be oiled frequently (daily) in order to maintain its good cutting performance and thus ensure a long service life (Fig. 9). Only use blade set oil order no. 1854-7935 (200 ml).
- Blade set oil and hygienic spray are available from your dealer or our Service Centre.
- The blade set should be replaced if the cutting performance is reduced after extended use, despite regular cleaning and lubrication.

Changing the blade set
- Switch off using the On/Off switch (Fig. 2ⓑ).
- The blade set can be removed by sliding it away from the housing in the direction of the arrow (Fig. 6ⓐ).
- To replace the blade set, position it with the hook in the slot on the housing and press until it clicks into place (Fig. 6ⓑ).

Disposal in EU countries

Do not dispose of the appliance with domestic refuse. As part of the EU Directive governing the disposal of electrical and electronic equipment, the appliance is accepted free of charge by local waste collection points or recycling centres. Discharge batteries prior to disposal! Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Disposal in non-EU countries
- Please dispose of the equipment at the end of its life in an environmentally friendly manner.
- Disconnect the plug-in transformer from the power supply and switch on the appliance to discharge the battery completely.
- Remove blade set (Fig. 6ⓒ) and remove the screws in the housing opening using a screwdriver (Fig. 9). Pull the two halves of the housing apart and take out the whole drive with mounting plate (Fig. 10).
- Pull the battery pack off the mounting plate. A screwdriver may be used to lever it off (Fig. 11).
- Batteries should be disposed of at an appropriate collection point.
- Do not connect the appliance to the power supply after the batteries have been removed.

Guarantee
1. In addition to the claims under the law and/or contract of sale which arise from material defects, the rights arising from this guarantee are granted by the seller to the customer. These rights shall not be limited by the guarantee.
2. WAHL GmbH guarantees its small electrical appliances be free of any defects.
   Parts that are subject to wear and tear such as shaver foils, drive components, blade sets, attachment brushes, batteries or battery cells are not included in this guarantee.
   The guarantee is excluded if
   - the appliance has been misused or treated carelessly,
   - the appliance has been damaged due to excessive stress, incorrect use or external influence,
   - the defect has been caused by failure to observe the operating instructions,
   - a repair or a repair attempt has been carried out by personnel other than that of a WAHL GmbH factory or of an authorised point of sale.
3. The guarantee period is subject to the length of the statutory period of limitation for material defects of the domestic law of the country in which the appliance has been purchased; however, the maximum guarantee period is 3 years.
   The period shall commence at the time of delivery of the appliance from the seller to the purchaser.
   The place of purchase and the date of delivery shall be proven by submitting proof of purchase, for example, the sales receipt, invoice, delivery note or similar document.
4. WAHL GmbH shall eliminate at no additional cost any defects that occur during the guarantee period if we are notified in writing within three weeks of their occurrence. Repairs will be carried out at a WAHL GmbH factory or at a point of sale authorised by WAHL GmbH. WAHL GmbH is entitled to remedy the defect by delivery of a appliance identical in construction. Further claims of the customer arising from this guarantee, particularly claims for reimbursement of expenses, reduction, compensation for damages or the right of withdrawal, shall be excluded. Statutory or other contractual claims arising from material defects shall remain unaffected.
   The guarantee period shall not be extended if services are performed under the terms of the guarantee.
5. The parts replaced when carrying out the repairs under warranty or the appliance retained in case of replacement delivery shall become property of WAHL GmbH.
6. If our customer services are called upon without due cause, WAHL GmbH shall be entitled to charge the costs incurred to the customer.
7. In case any defects occur, please contact your dealer or the service centre in your country.

Wahl India Grooming Products Pvt. Ltd.
Office No. 201, 2nd Floor
X Cube, Opp. Fun Republic
New Link Road, Andheri (West)
Mumbai – 400 053 India
e-mail: customercare@wahl-india.in